


T-Multi



Roca


A5A204A

2 WAYS

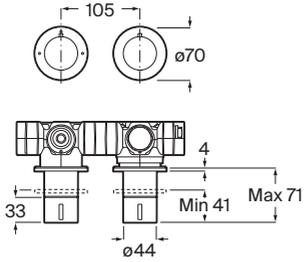


A5E204AC00

(mm)

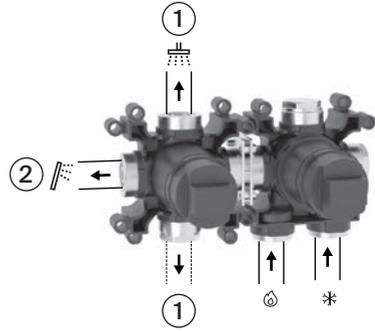


A5A224A

3 WAYS

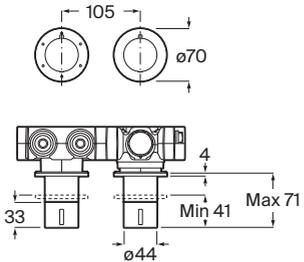


A5E224AC00

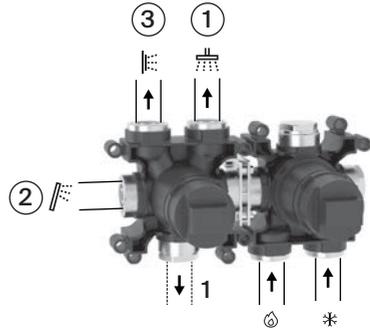


A5A214A

2 WAYS

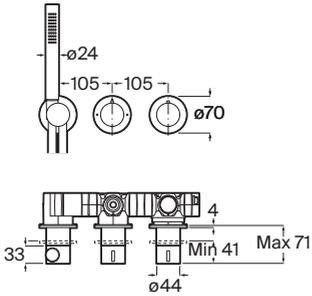


A5E214AC00

(mm)

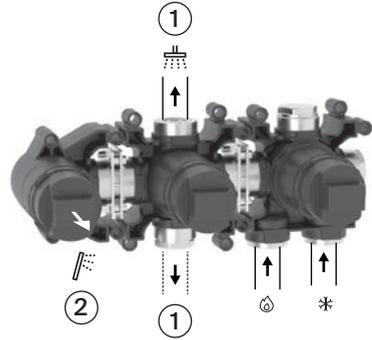


A5A234A

3 WAYS

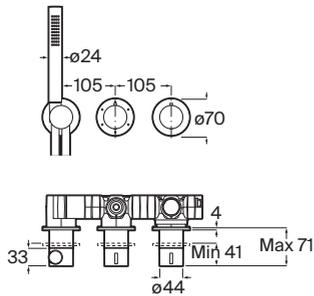



A5E234AC00

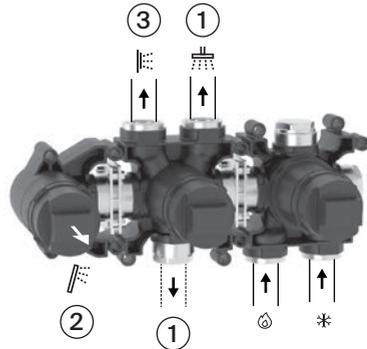





A5A204A

A5A224A

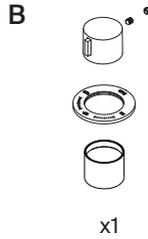
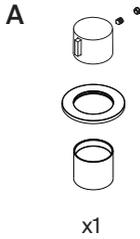


A5A214A



A5A234A




A5A244A




A | Diverter

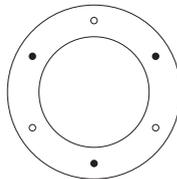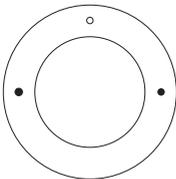


B | Thermostatic

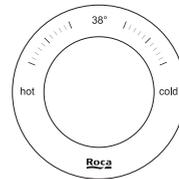


1

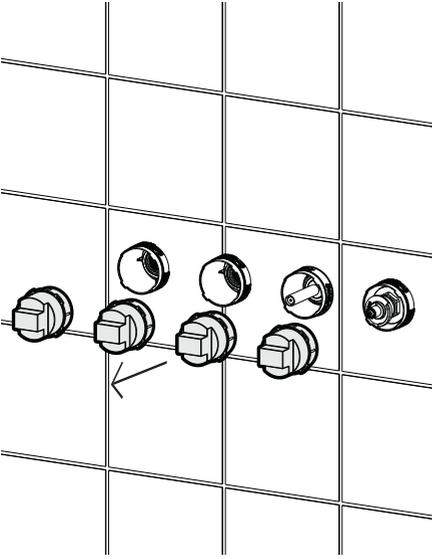


2

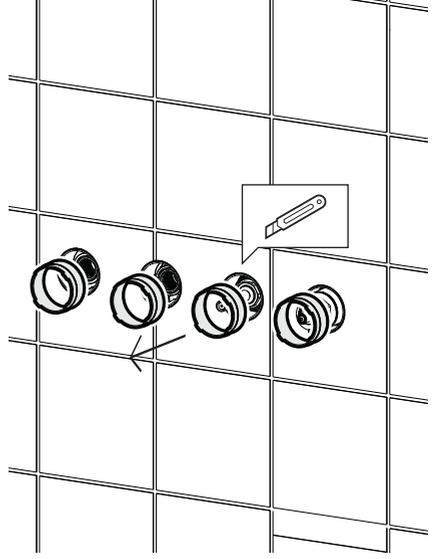


3

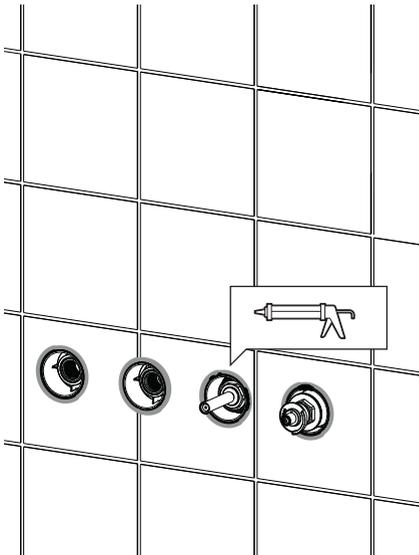


4

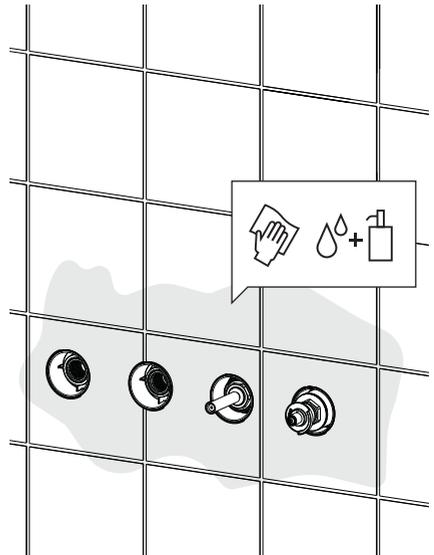


5

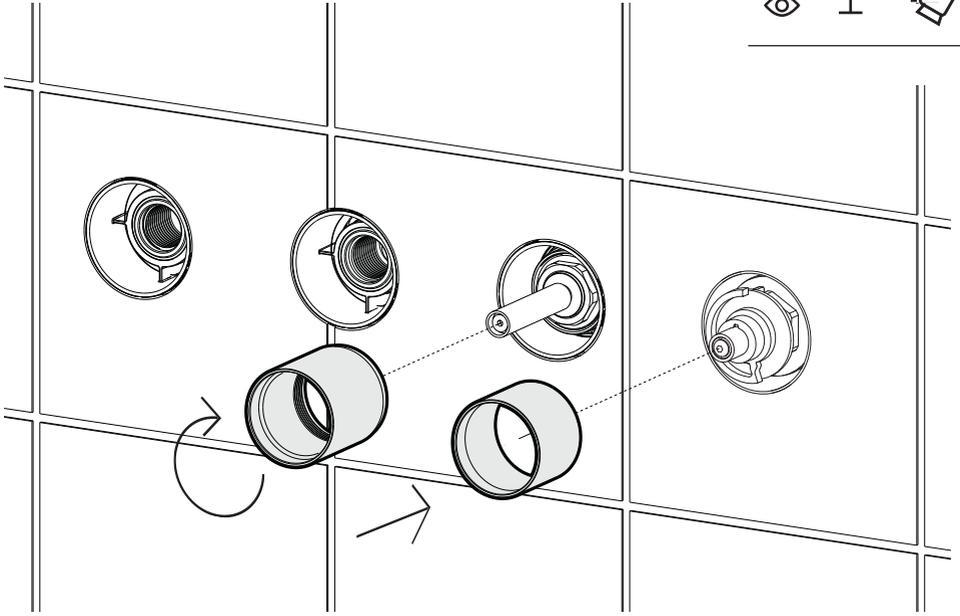


6

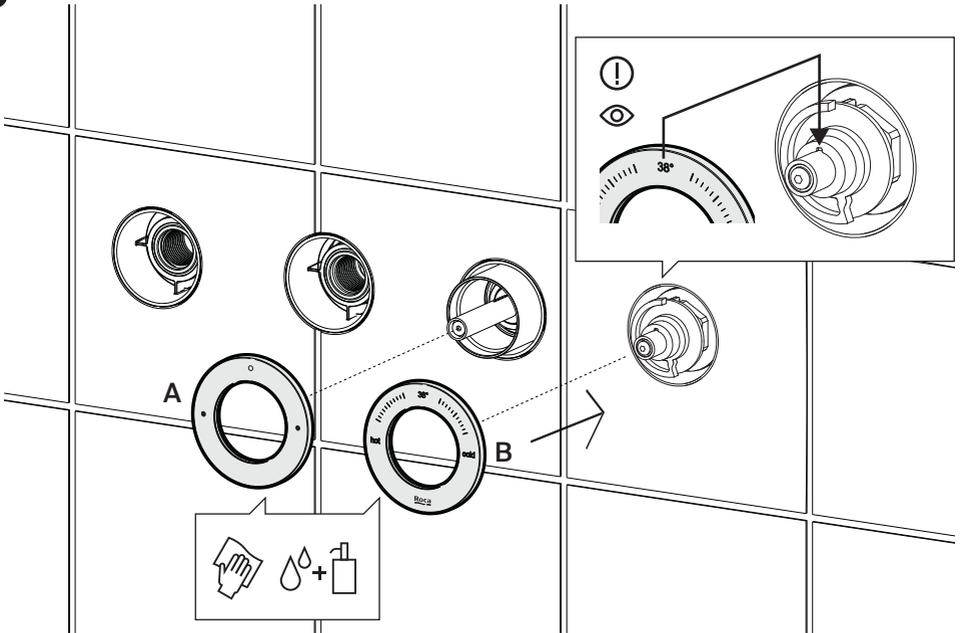


7

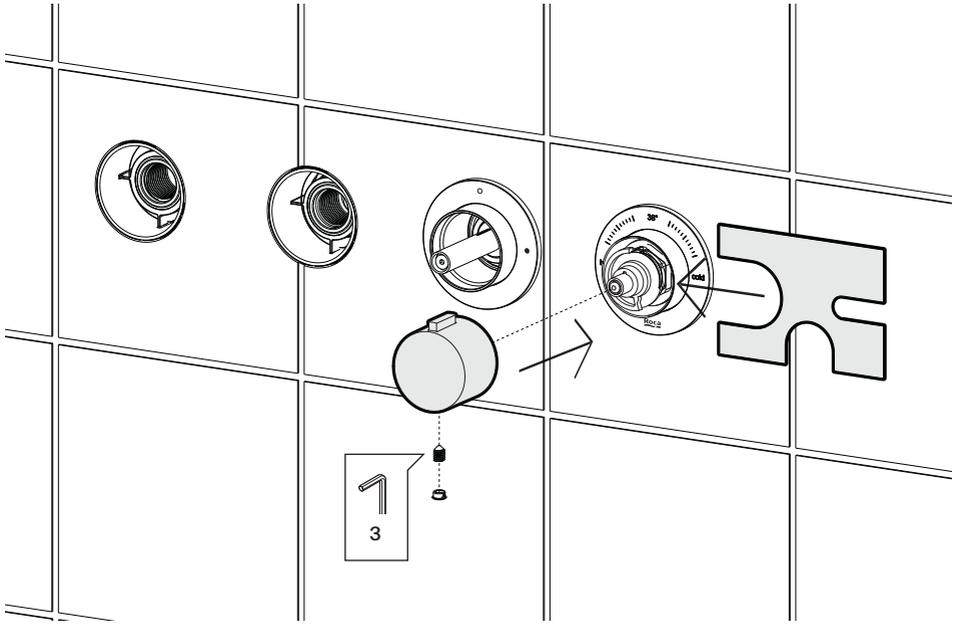


8

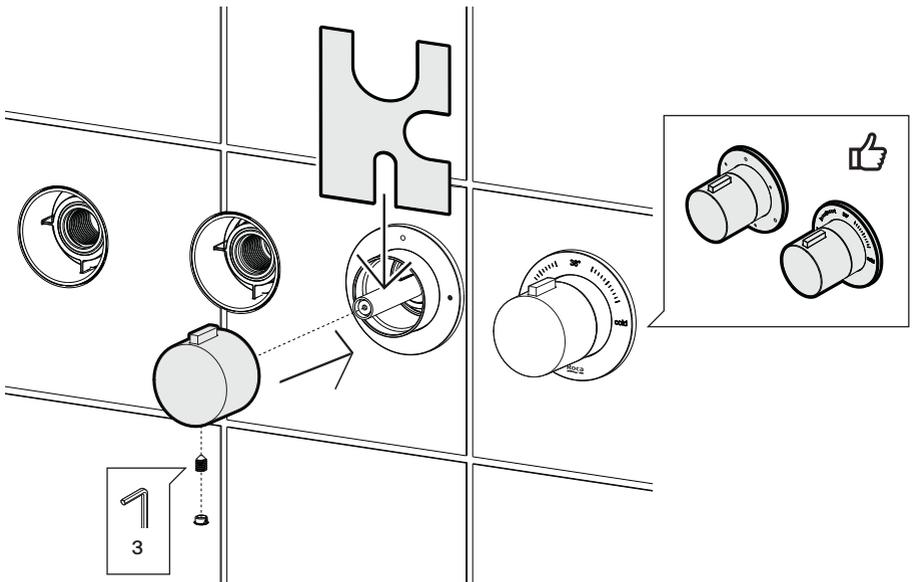


9

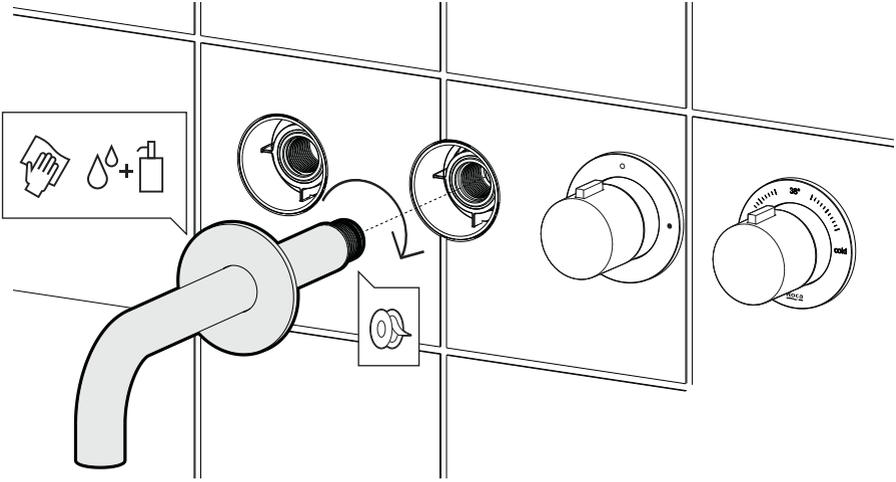


10

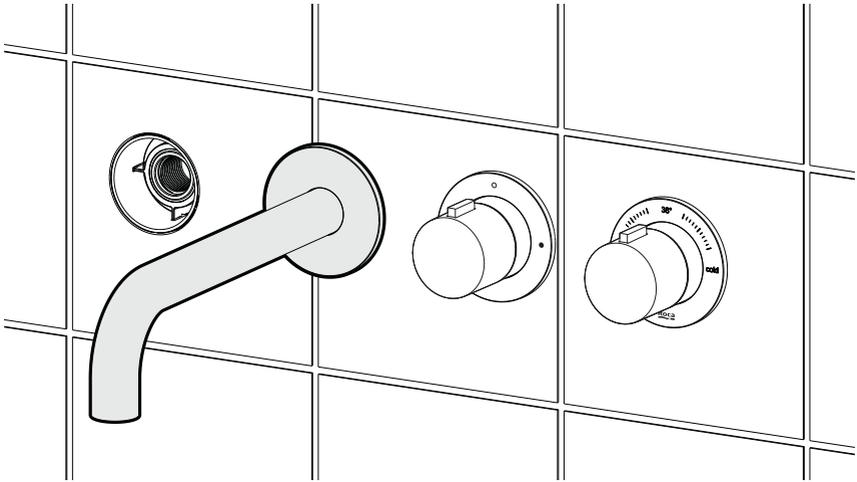


11

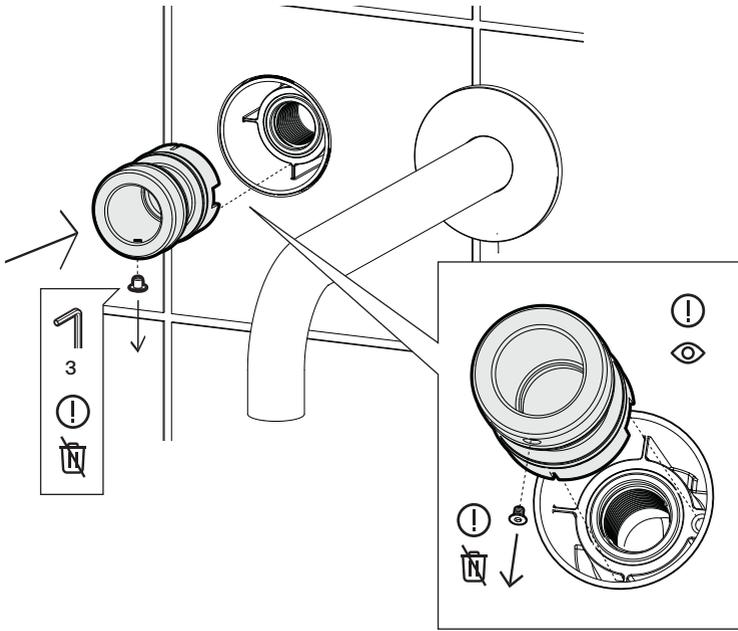


12

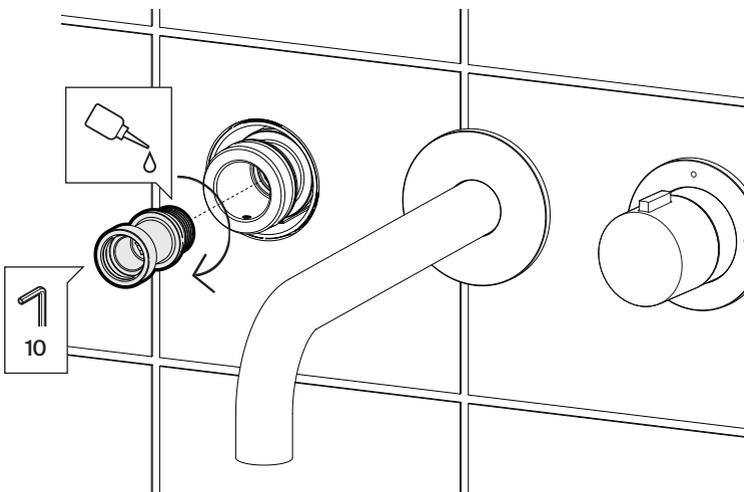


13

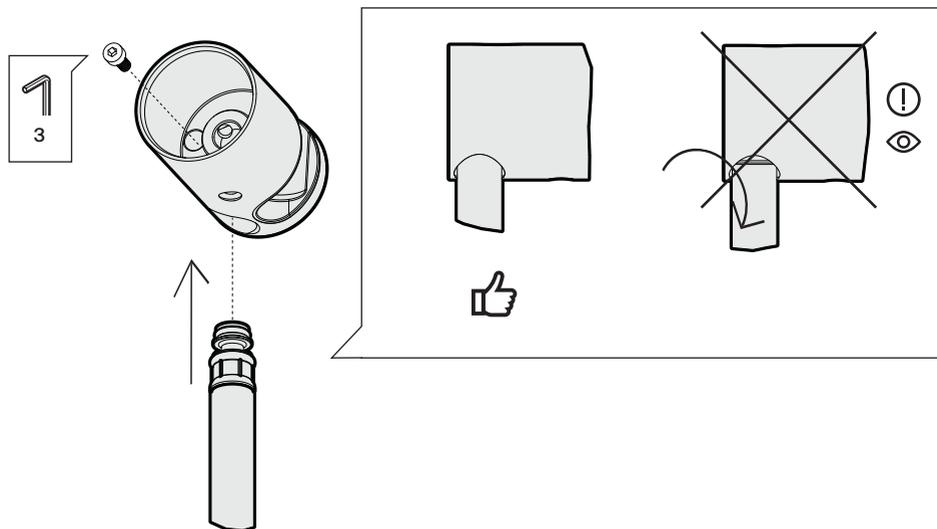


14

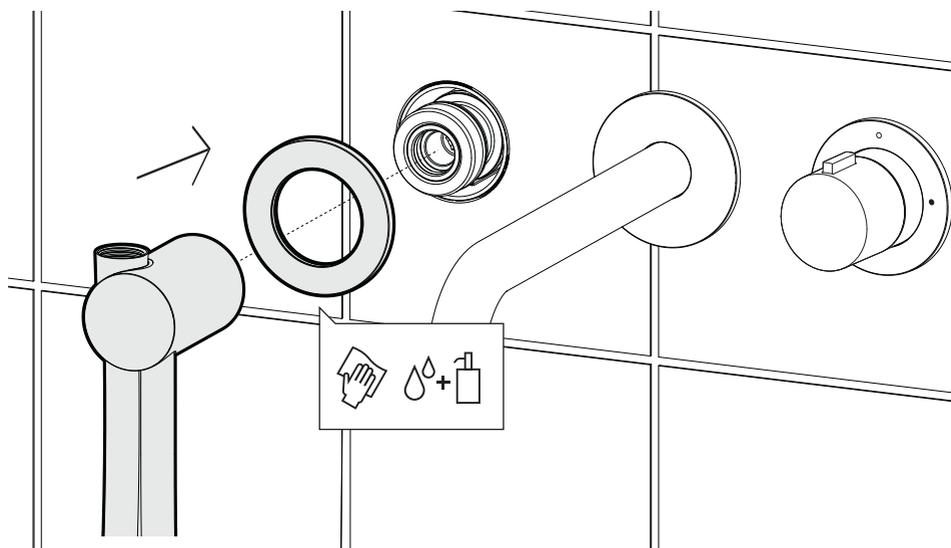


15

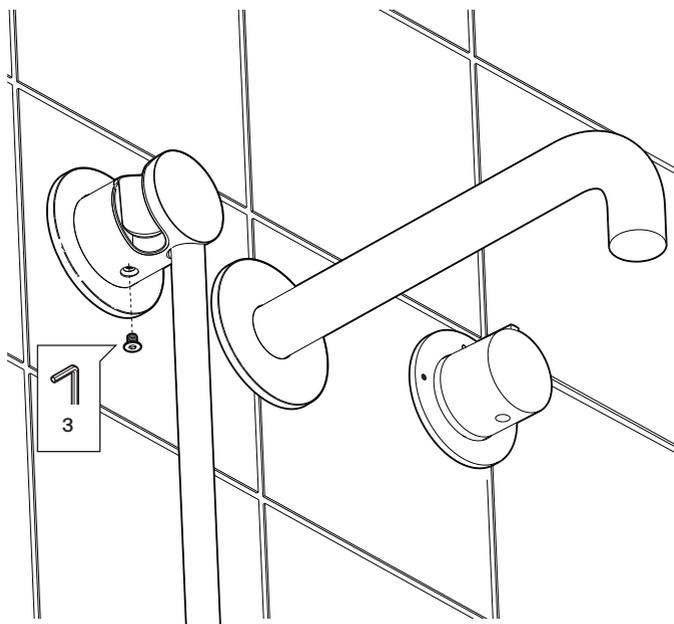


16

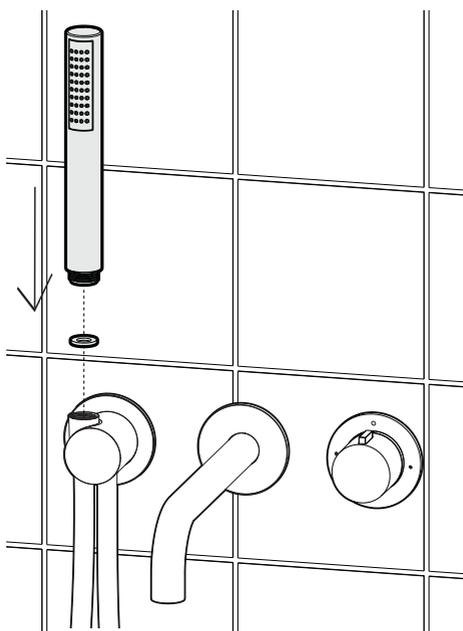


 1

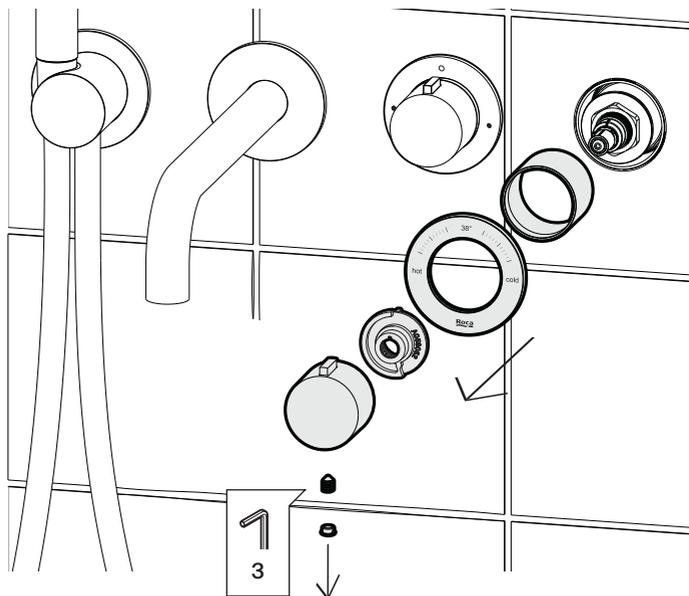


2

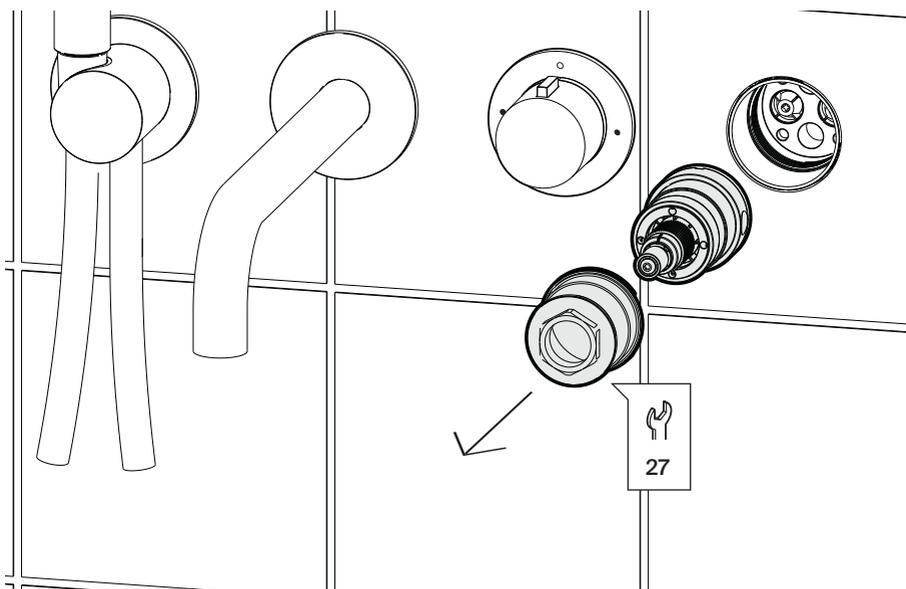



3

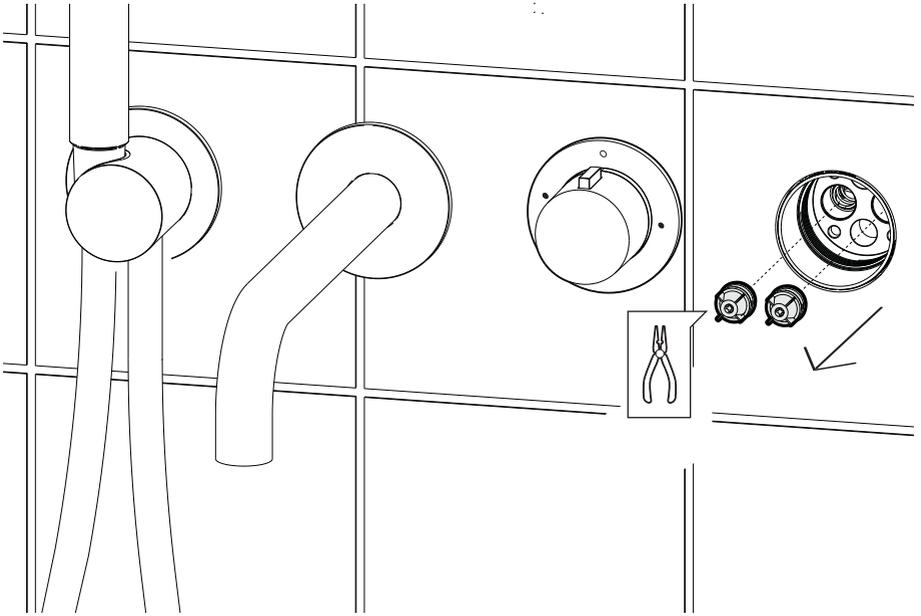


4

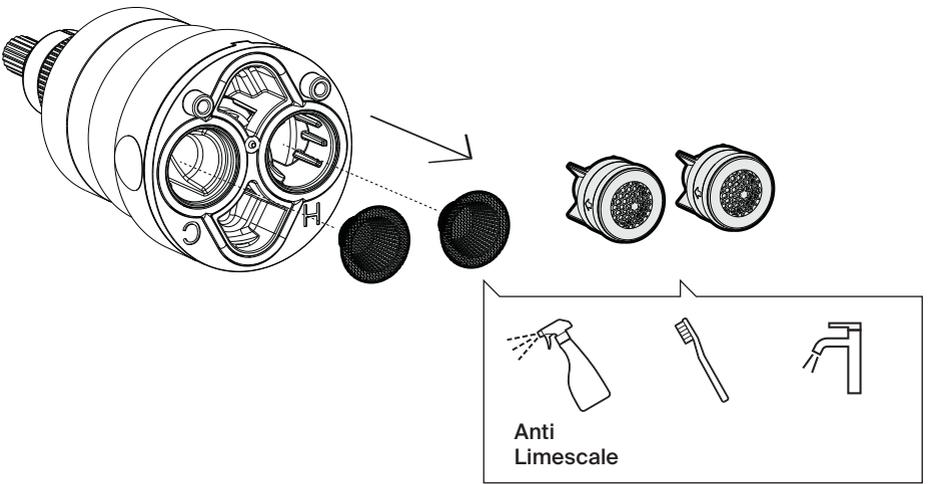


5

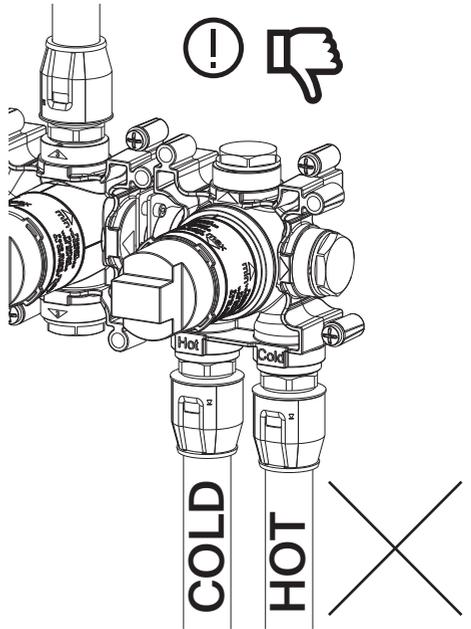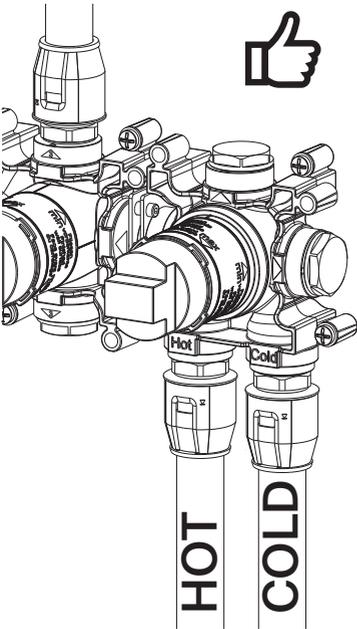

6


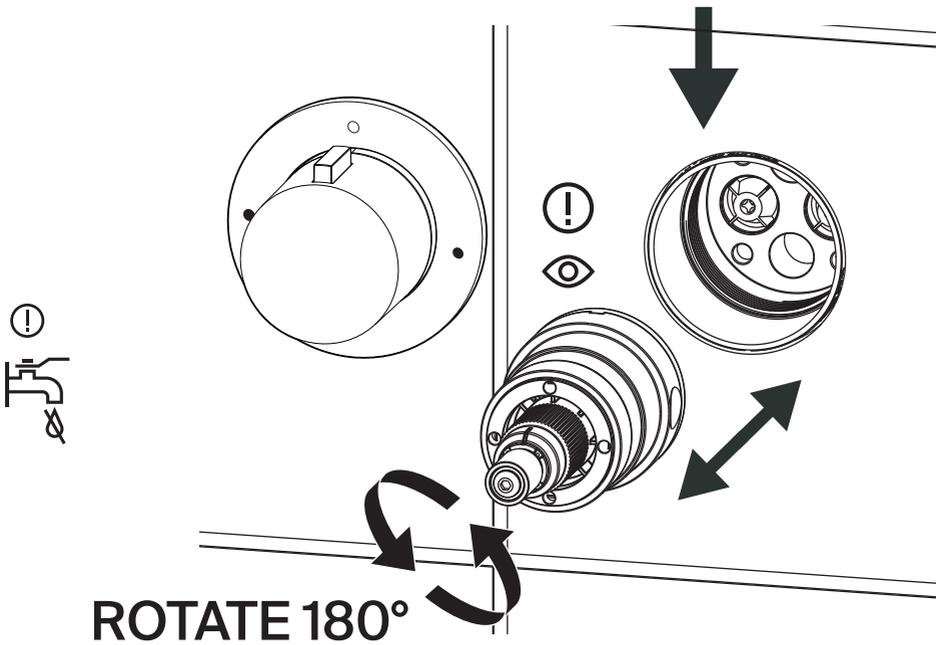


7

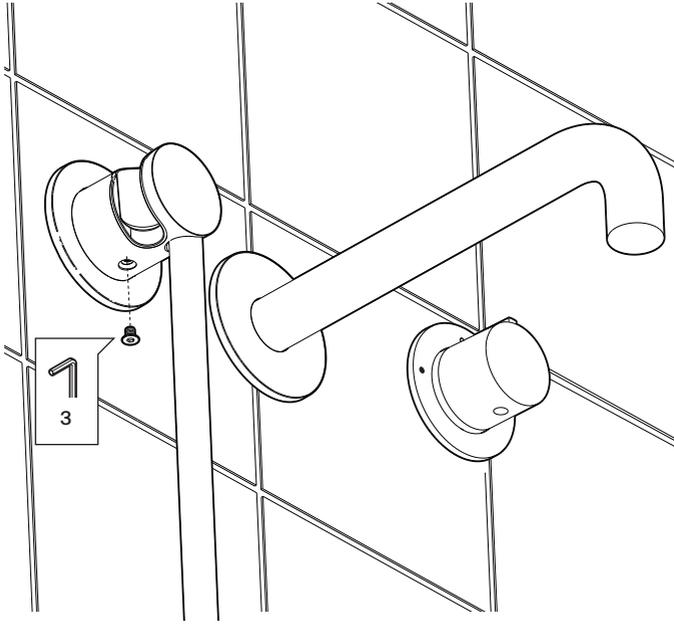


8


REPLACE THE FLEX HOSE
AND START FROM POINT 14

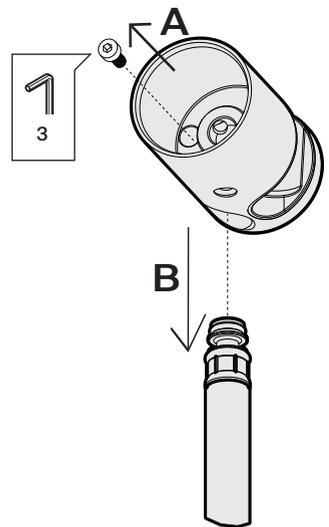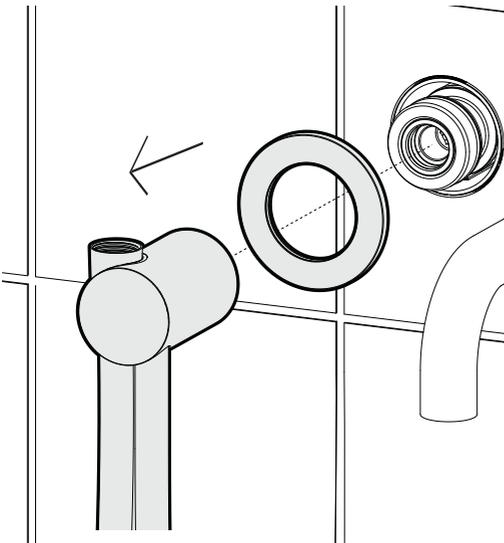

9

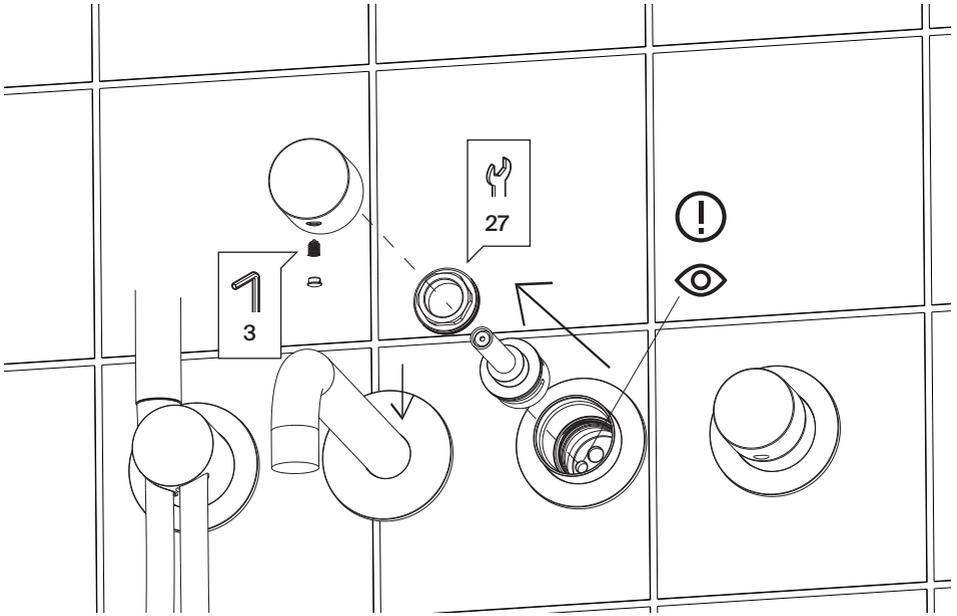


10

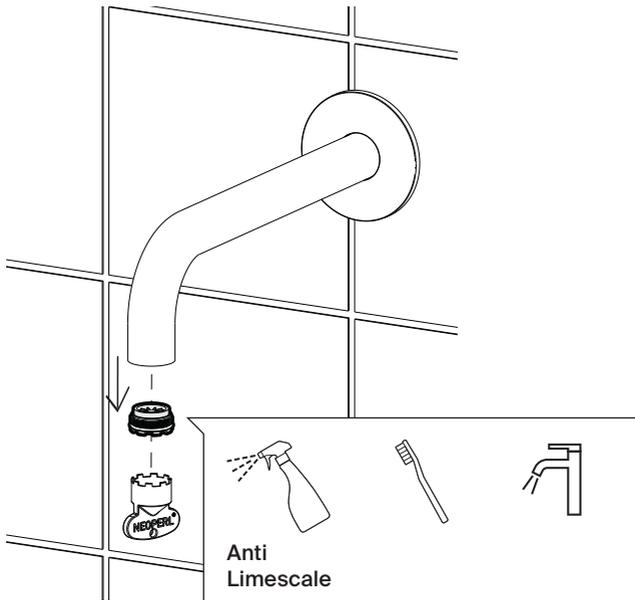




A5A204A

1
2  3

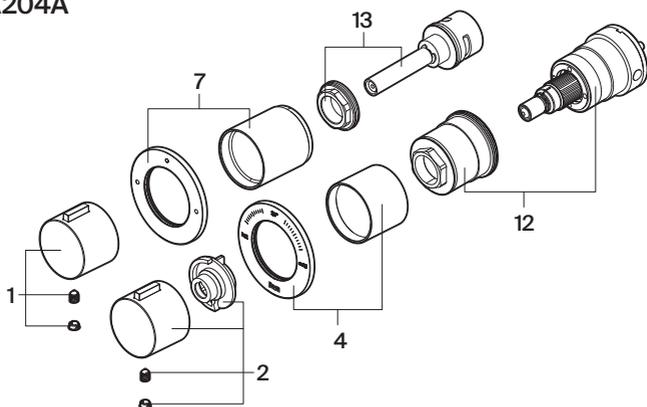


A5A224A

0  3

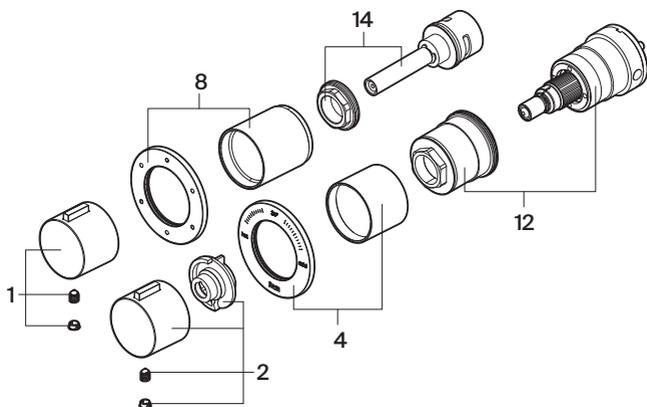


A5A214A


1
2  3

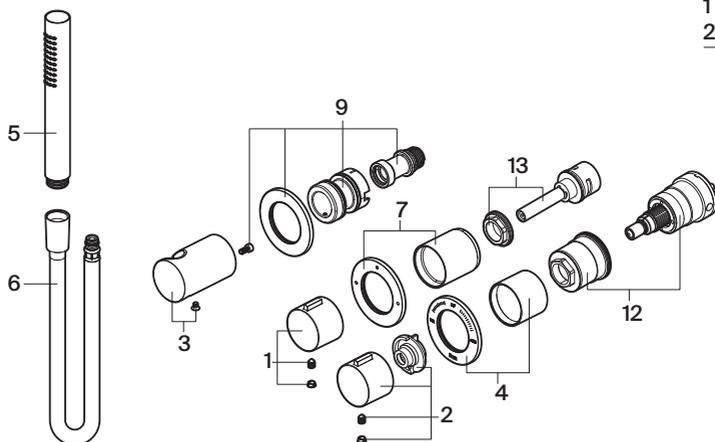

A5A234A

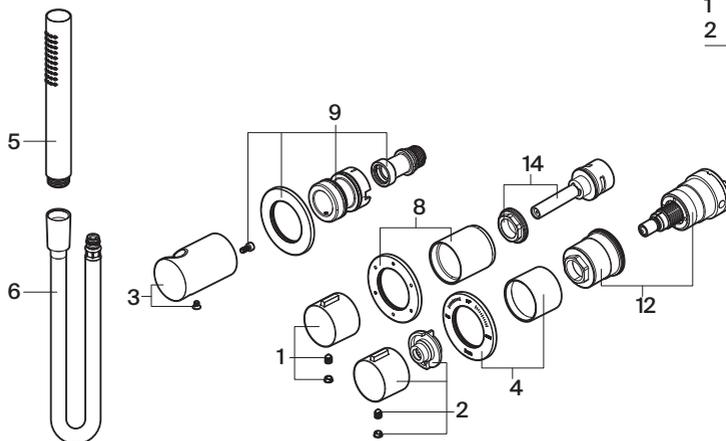

A5A244A

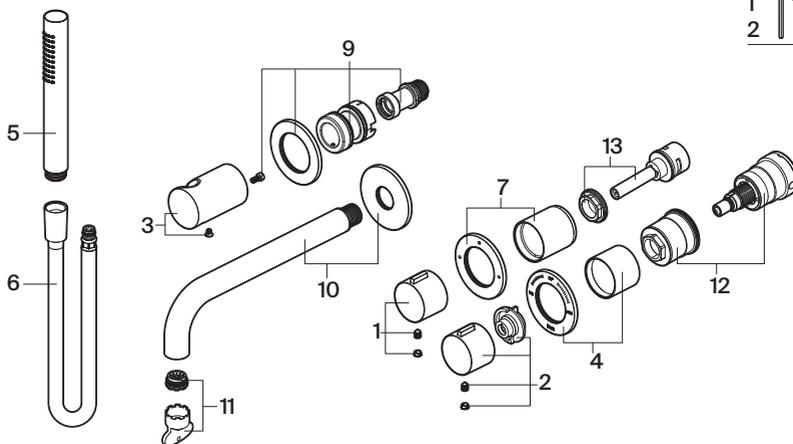

1	AG02784..R
2	AG02783..R
3	AG02780..R
4	AG02787..R
5	A5B9B61.0

6	AG02782..R
7	AG02788..R
8	AG02789..R
9	AG02790..R
10	AG02791..R

11	AG0278500R
12	AG0279800R
13	AG0279600R
14	AG0279700R

CÓDIGO / CODE

0000000 .. 0

ACABADO / FINISH

→ www.roca.com

